INSTR. : 68881	PG:	REV:	ITEM NO.	PART NUMBER	DESCRIPTION	PLSLKSW	PLSLKCW
	•		1	65963-W	STOP CLAMP, WHITE	2	2
PART PLSLKS & PLSLKC			2	68733-W	SLK,PL,FSV,I/S BAR, WHITE	1	-
PART • PROLIFT, SLK, FSV, STD & DESC. • &			3	68877-W	SLK,PL,HANDLE ASM,STD, WHITE	1	1
NOTE: THIS INSTRUCTION IS VALID FOR THE FOLLOWING KITS:			4	68732-W	SLK,PL,LOWER CLAM CLAMP, WHITE	2	2
			5	68885-BPB	SLK,PL,CLAMP PLASTISOL,B	1	1
			6	68739-W	SLK,PL,CV,I/S BAR, WHITE	-	1
-PLSLKSB -PLSLKCB -FOR BLACK KITS, REPLACE "-W" PARTS WITH "-B" PARTS PLSLKSW OR PLSLKSB 2							
PLSL)R		5		4		

GET TO KNOW THE VEHICLE - AT THE BEGINNING OF ANY INSTALLATION, CHECK THE LOCATION OF THE FUEL TANK, FUEL LINES, BRAKE LINES, HIGH VOLTAGE BATTERIES AND WIRING HARNESSES TO AVOID INJURY OR PROPERTY DAMAGE FROM TOOL CONTACT.

SEAL ALL EXTERIOR HOLES - ALL INSTALLATION HOLES SHOULD BE SEALED WITH BUTYL TAPE OR SILICON TO PREVENT WATER AND EXHAUST GASES FROM ENTERING THE VEHICLE.

CONTROL DRILL DEPTH - TO AVOID DAMAGE TO THE VEHICLE, USE A DRILL STOP OR CLEARED STEP BIT WHEN DRILLING INSTALLATION HOLES.

ALWAYS ADD PRIMER - WHEN ADDING INSTALLATION HOLES BE SURE TO USE A SELF-ETCHING PRIMER TO PREVENT CORROSION, FASTENER FAILURE AND INJURY.

MOUNTING POINTS MUST HAVE METAL-TO-METAL CONTACT - USE PROVIDED MOUNTING SPACERS TO ACCOMMODATE FOR VEHICLE FEATURES, CARPET OR SUBFLOORS.

PROVIDE CLEARANCE FOR SPACERS - IF THE INSTALLATION VEHICLE CONTAINS A CARPET OR SUBFLOOR, USE A 1-3/16" DIAMETER CARPET CUTTER (P/N: 31183-0) AT ALL MOUNTING LOCATIONS TO OPEN UP ROOM FOR SPACERS.

CHECK SPACER ORIENTATION - BE SURE THAT THE INDENT IN THE SPACER COVERS THE PLUSNUT HEAD; THIS ENSURES THE MOST METAL-TO-METAL CONTACT AND REDUCES VIBRATION.

 
PLUSNUT INSTALLATION - A PLUSNUT GUN IS RECOMMENDED FOR PLUSNUT INSTALLATION FOR ITS PRODUCTION SPEED. HOWEVER, A PLUSNUT SETTING TOOL CAN ALSO BE USED (P/N: 22200-0).

THRU-BOLT CLEARANCE - WHEN USING A THRU-BOLT AT ANY MOUNTING LOCATION, BE SURE THAT YOUR HOLE HAS 1/16" CLEARANCE.

FASTENERS USED



FAS0861 NUT,HEX NLK FLG 5/16-18SS QTY: 10




FAS0035 BOLT,SQ HD 5/16-18X1.0 SS QTY: 04



FAS0866 BOLT,CRG 5/16-18X.75 SS QTY: 04



FAS0838 BOLT,CRG 5/16-18X2.5 SS QTY: 02

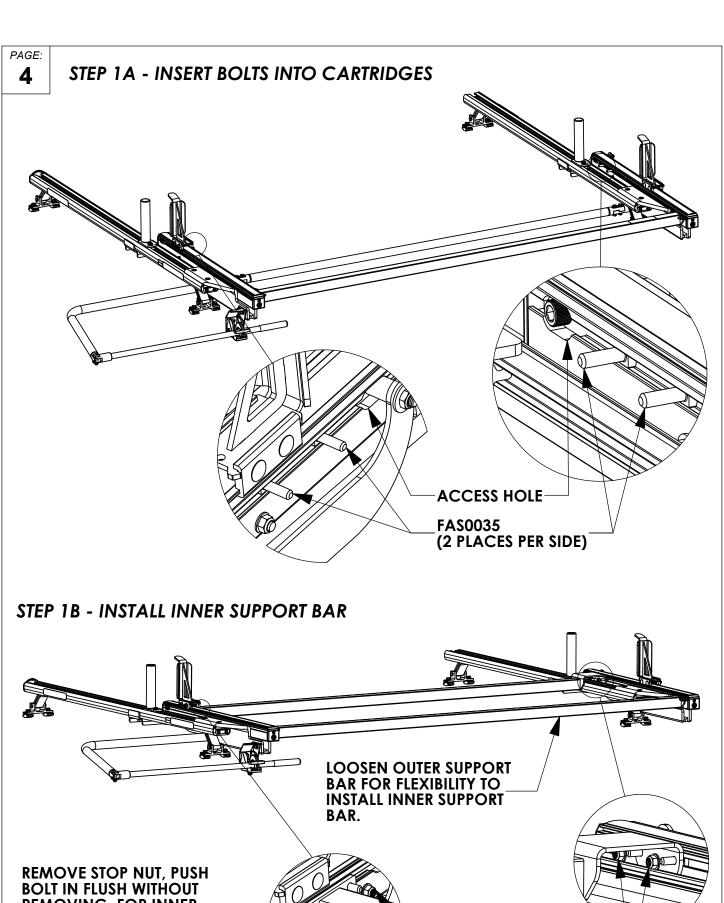

FAS0861

(2 PLACES PER SIDE) LOOSE INSTALL 1/2" SOCKET

REMOVE STOP NUT, PUSH BOLT IN FLUSH WITHOUT REMOVING, FOR INNER SUPPORT BAR CLEARANCE. RETIGHTEN AFTER INSTALLATION.

